


Anti Ligature Installation Instructions

1.

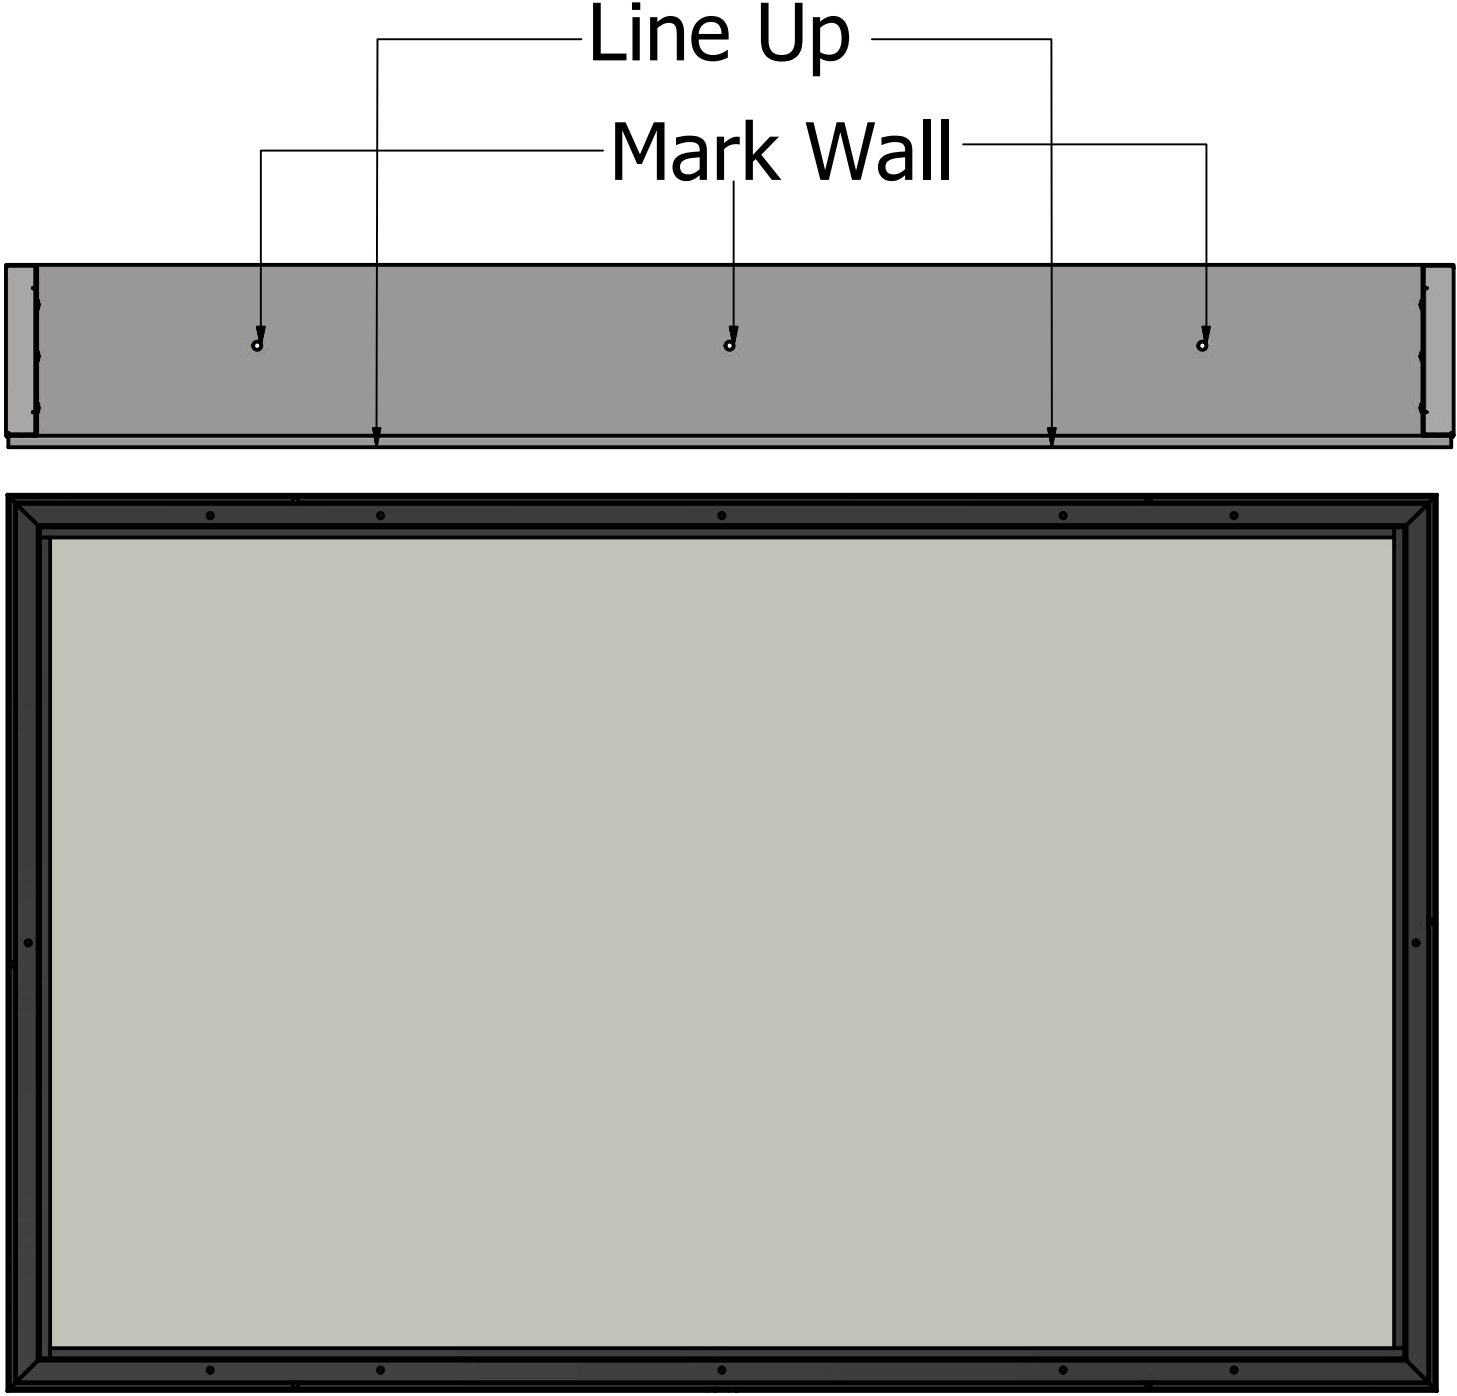

With The TV Shield PRO Lite already installed on wall, remove the top 2 security screws already installed. Place the anti ligature hood on top of enclosure and line up the 2 holes on the bottom of hood with the 2 holes in enclosure.

Mark holes on wall using the anti ligature hood as a template.


Included Parts

- 1) Anti Ligature Hood
- 2) 1/4-20 x 1" T27 Torx Machine Screws
- 3) 1/4-20 x 1.25" T27 Torx Sheet Metal Screws
- 3) Plastic Wall Anchors
- 1) T27 Torx L-Key (tool for tightening)

Tools Needed


- Drill
- 1/4" Drill Bit
- T-27 Torx L-Key (included tool)

2.

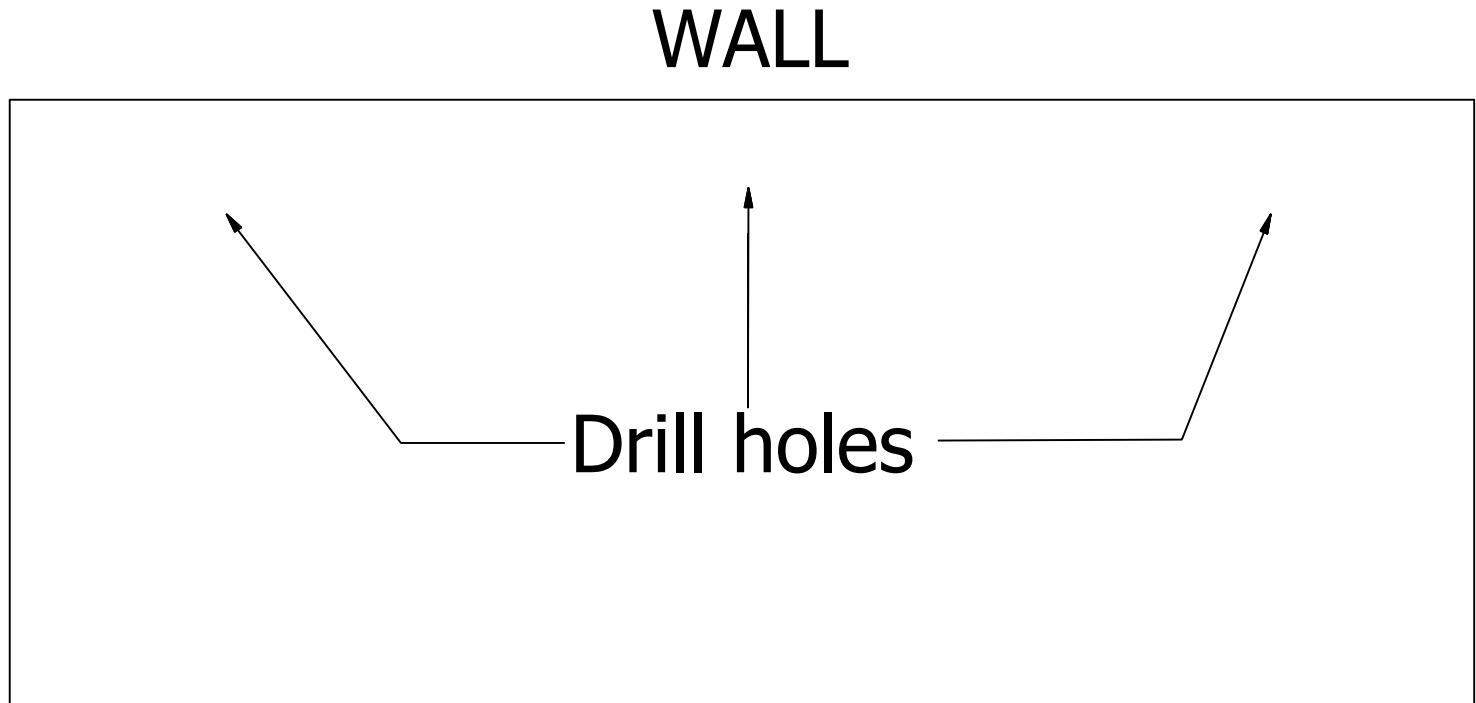

Remove the anti ligature hood and drill holes in wall where you marked using a 1/4" drill bit and install the plastic wall anchors.

3.

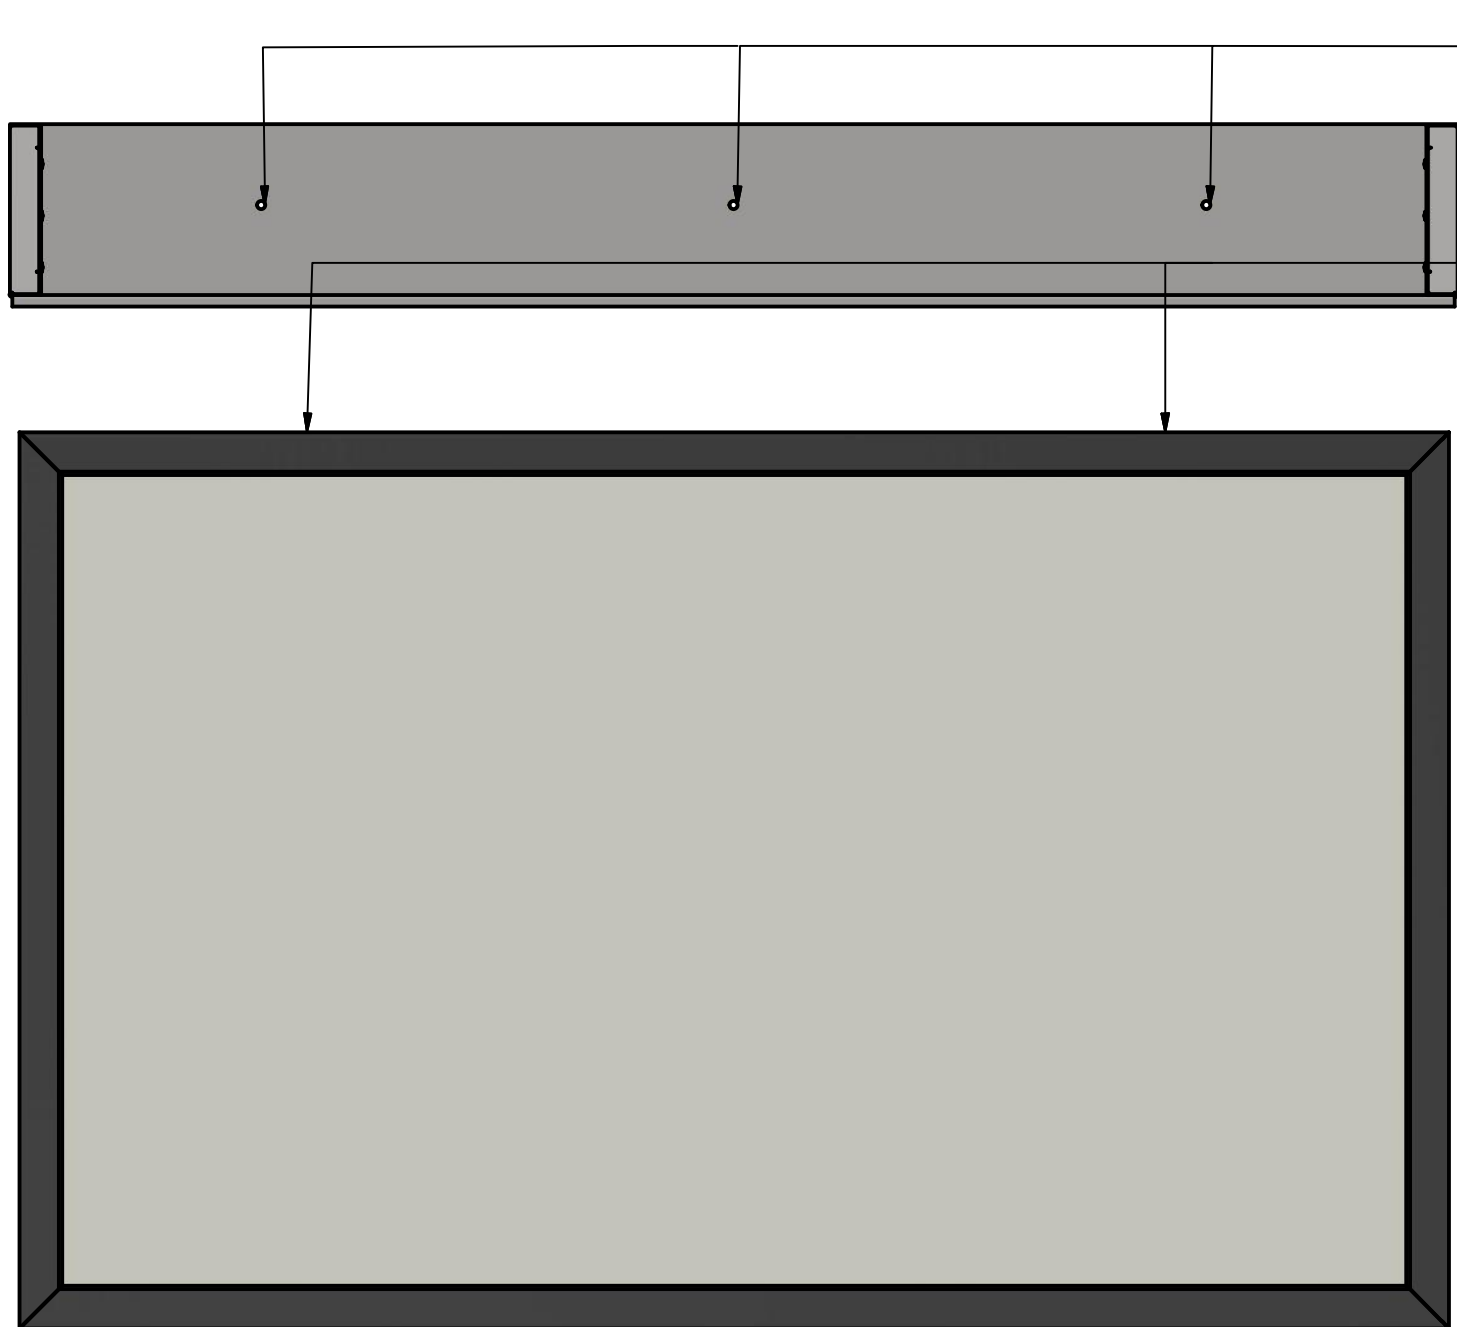

Place the anti ligature hood back on The TV Shield PRO Lite enclosure. Install 2) 1/4-20x1" machine screws using the included T-27 Torx L-Key. Install 3) 1/4-20x1.25" Sheet Metal Screws into already installed plastic anchors.